 


CM-Z21 Foot Massager

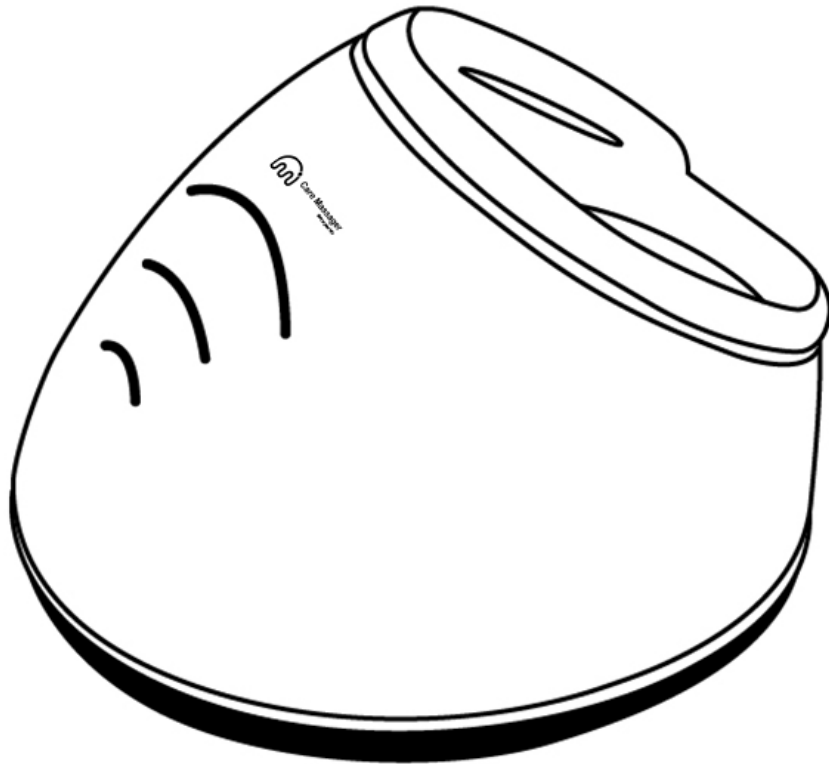

Thank you for purchasing the CM-Z21 foot massager, please read carefully the user manual before using.

Pay more attention to the safety items before operation. Please keep the user manual after reading.

Foot Reflexology Chart



A. Warning

1. Please reading carefully the user manual before using to ensure safety and proper.
2. Please using the foot massager according to the user manual shows.
3. Pull out the plug from outlet after using or before cleaning.
4. Be used Heating-function with caution to avoid burns. Do not using on Insensitive, too sensitive and poor circulation parts; Improper operation will cause dangerous, if Let children or physical and mental function impediment to use freely.
5. Do not using under pillow or blanket, otherwise, fire, electric shock and damage may caused by overheating.
6. Do not cover when using, otherwise, the motor will be damaged for overheating.
7. If close to or for use in children, mental and physical dysfunction or disability, need someone to g0de and responsible for their safety.
8. Stop using immediately if feel unwell.
9. Do not use when the following happens: the power cord or plug is damaged; cannot operate properly; fall on the ground and damage; fall into water, please contact the after sell centre to Inspect and maintain.
10. Do not use any parts unless from manufacturer.
11. Do not insert or fall any object into any opening of the product.
12. If want to cut off the power, turn off all buttons and pull out the plug from outlet.
13. This product cannot be used as a self-diagnosis and treatment.

B. Using Environment

1. Do not use in an area of high humidity or dusty;
2. Do not use in a room of high temperature over 40°;
3. Do not place outdoors;
4. Do not place close to electric furnace, stoves or in direct sunshine.

C. If you are one of the following situations, please consult your doctor before using:

1. Being treated, or feel unwell;
2. Hypertension, heart disease, cerebral arteriosclerosis, cerebral thrombosis;
3. Malignancy;
4. Pregnant women, menstruating women;
5. Osteoporosis;
6. With pacemakers or other medical devices;
7. Acute illness;
8. Minor;

D. Switch

1. Do not operate switch by wet hand;
2. Do not let the switch contact with water or other liquids.

 
Note

1. Do not fall asleep when the product is working;
2. Do not use when drunk or unwell;
3. Do not let the massage roller work on hand, elbow, knee, chest or abdomen;
4. Do not keep working over 30 minutes;
5. Do not use when the cloth cover is broken;
6. Do not use in an hour before or after eating;
7. Do not use heating function suddenly in a low temperature room. Heating should be used when the temperature is normal.
8. Use one hour after moving from a low temperature to a warmer environment because there may be water vapor inside the product that affects normal use.

Warranty Terms

1. Warranty rights are not transferable.
2. Free warranty from the date of purchase and in the warranty period (without outside).
3. Warranty period is one year.
4. Please show proof of purchase and warranty card.
5. The time of purchase is subject to the valid documents from counter.
6. This warranty does not apply to the scope of leasehold, transaction, commerce, organization and other residents' users.
7. The following situations are not covered by warranty, but provide paid service (labor and material cost will be charged):
 - (a) All damage caused by human factors, including used in non-normal environment, does not use and keep in the right way according to the user manual, improper operate;
 - (b) Disassemble, repair, or modification by unauthorized users or the third party
 - (c) Inappropriate transportation after purchasing.
 - (d) Damaged by force majeure (fire, flood, lightning, earthquake etc.)

Product Structure

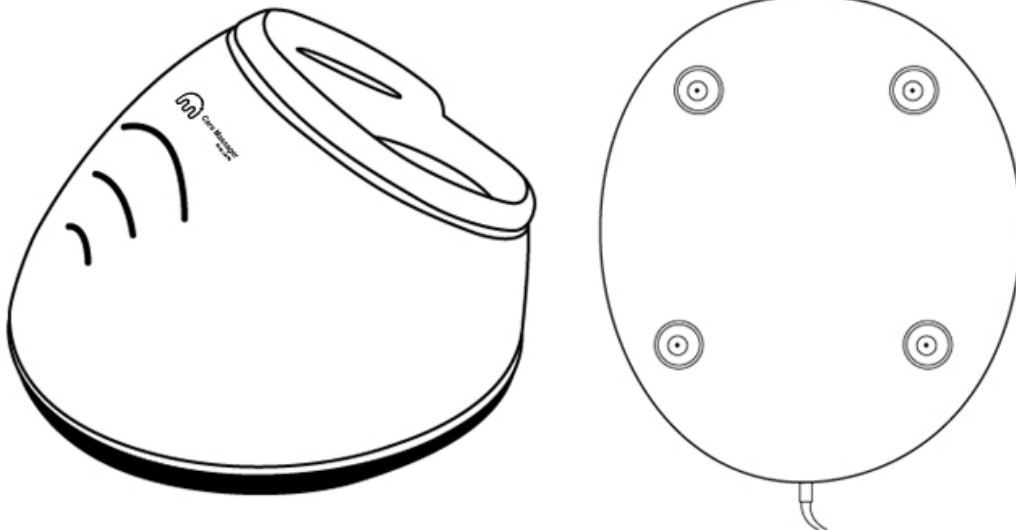

1. Facade of middle: 4 buttons-control massage functions;
2. Mid of inner: Scrapping massager-on foot arch, with heating function;
3. Front of inner: roller-on feet;
4. End of inner: kneading massage-on heel;
5. Under facade: air bags-air press massage on instep;
6. Bottom surface: Washable cloth cover-cleaning;
7. Bottom: Power plug;

Features and Schematic Diagram

Features

 Care Messenger
Better your life **CM-Z21 Red**



 Care Messenger
Better your life **CM-Z21 Pink**



 Care Messenger
Better your life **CM-Z21 Yellow**



 Care Messenger
Better your life **CM-Z21 White**



This product has:

1. LCD screen, sense of science and technology.
2. The function of chi, controllable massage time.
3. The humanized design, provide customized memory function.
4. Low voltage work AC100V - 240 - v gm (using switch power adapter configuration).
5. Patent type foot cloth with quick release structure design.

 
Product Features

- Foot type design, fashion beautiful, light and portable.
- Set foot roller, scraping the delusion, kneading, air pressure, heating a variety of health care massage functions in one body.
- Real massage whole package, the acupuncture point massage depth, whole body meridian clear foot reflection zone.
- Can unpick and wash cloth, let you keep clean.



Schematic diagram

Operation and Function Explanation

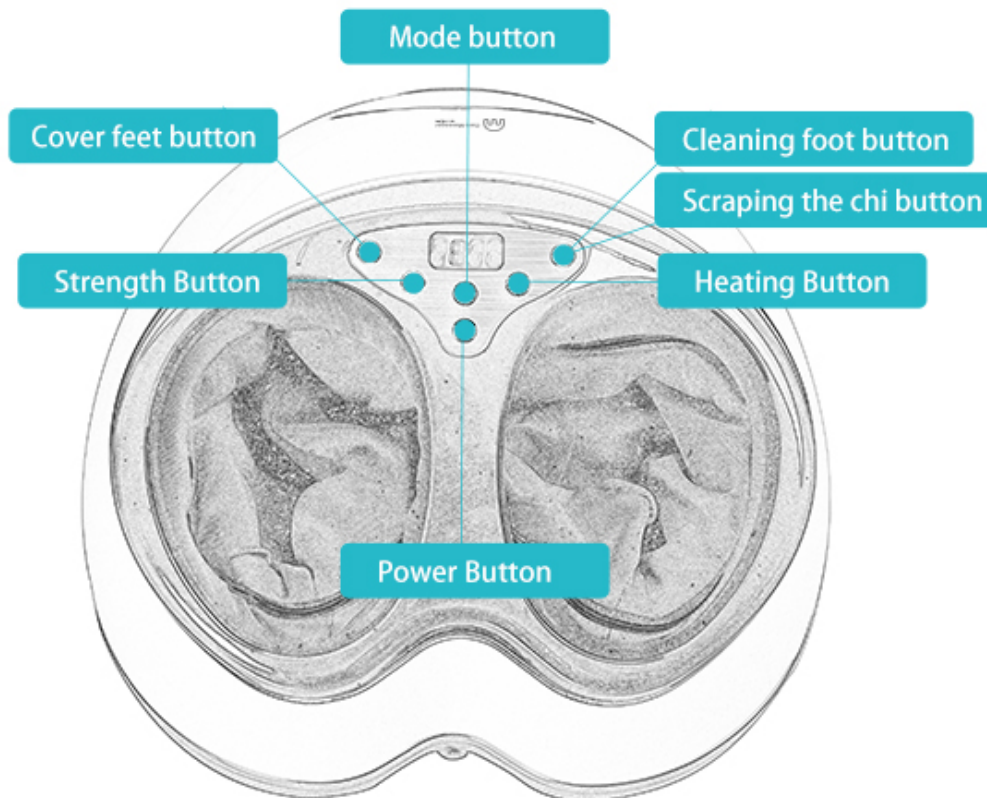

Keys function is introduced:

Power button:

open and close control of the whole machine function

Cover feet button:

Air pocket in the whole package scientific deflated, under the condition of your feet to squeeze the instep, arch infrared heating, warm feet warm heart health function

Strength Button:

Three kinds of intensity transformation can be realized. Red light is strong, alternating red and blue color for the middle-grade, blue light is weak.

Heating Button:

Heating function is separately. It is shows red when working. (enabled by default)

Mode button:

The machine in three kinds of massage mode automatically, red, red, blue and blue mix 3 kinds of color lights, red for curing mode, red and blue mixed color for balance mode, blue for roller model.

Scraping the chi button:

Sweetheart to scrape the foot massage, promote blood circulation. (this feature is part of the machine configuration)

Cleaning foot button:

Enable the foot air purification function. (this feature is part of the machine configuration)

A. Before Using

Check if it is damaged or not.

Check placing position is flat.

B. Using

1. A wiring harness, untie, a insert at the bottom of the power plug, the other end to the power socket.
2. Second, the parsing operation

Time to adjust: long press mode key for five seconds, such as liquid crystal displays in a blink

state, then press strength increase time (30 minutes), add hotkeys to reduce time (minimum 5 minutes), set time, still waiting for the display flashing again until the stop blinking and start time, set the time to complete, the time adjustment function for the memory type, default adjust the time for the next work.

Scrapping mode: press the scrapping button, button light red light, scrapping pattern was open. (scrapping mode not startup pressure function, this model is choose to touch type)

Data memory: products in complete you, end of the work (except abnormal power) sequestration data automatically, after the next boot default you at the end of the last set of working time and pattern.

Specifications

Name	Foot massager
Model	CM-Z21
Rated Voltage	DC24V/2.5A
Rated Power	45W
Time	5-30min

Troubleshooting

The problem happened when using, solve them according to the following methods. If it is still in trouble, please send to the after sell centre or Authorized maintenance personnel to maintain.

Anomalies	Possible Cause	Approach
Does not work	<ol style="list-style-type: none"> 1. No power 2. power switch is turn off 	<ol style="list-style-type: none"> 1. Set up an electric circuit 2. Turn on power switch
Stop working	<ol style="list-style-type: none"> 1. Power outage 2. Massage time is over 15Mins 3. Keep working too long. The massager is overheating. 4. Excessive force, massager rollers cannot afford. 	<ol style="list-style-type: none"> 1. Check electric circuit 2. Turn on/off power again 3. Turn on/off the massager after cool. 4. Excessive force, massager rollers cannot afford.

Maintenance

A. Store

1. When not in use, the product into the box and placed in a safe, cool, ventilated and dry place.
2. Do not twist the power and wires.
3. Do not use a switching power supply and wire suspension products
4. Avoid pointed object scratched the surface.
5. Do not place in direct sunlight or high humidity place.

B. Cleaning

1. Turn off and unplug the power cord before cleaning,
2. Using clean and dry cloth
3. Do not use a switching power supply and wire suspension products

Note:

Do not use corrosive cleaners, benzene or thinner.

C. Maintenance

1. Keep massager cleaning and keep away from high humidity.
2. If it is not used for a long time, use a dust cover to prevent dust from entering.

About us



Care Massager Technologies Co., Ltd. is about creating a healthy home environment that helps

you relax your body, de-stress, and simplify your life. CAREMASSAGER is widely recognized for its home massage products, and continues to be a leading innovator in massage technology today. In a modern world of fast living filled with stress, CAREMASSAGER is committed to developing the best massage and relaxation products to deliver well-being and value to customers around the world.

CAREMASSAGER's full line of in-home wellness products are including: Neck Massagers, Back Massagers, Foot Massagers, Vibration Platform Machines, and more.

For more information on products, please visit our official website:

<http://www.caremassager.com/>

+86-13221668688 (WhatsApp)